
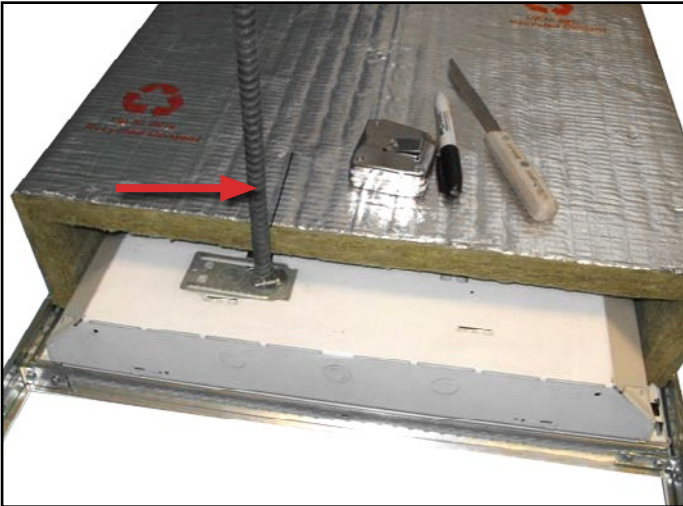


**PRIVACY SOUNDPROOFING LIGHT COVERS™(PSLC) - INSTALLATION GUIDE**


If you have any questions after reading this entire document, call the factory before starting the installation.

**INSTALLATION GUIDE FOR COMMERCIAL FLUORESCENT FIXTURES**

- 1** Place cover over light and align with grid. Mark and slit for power cable and any support wires.

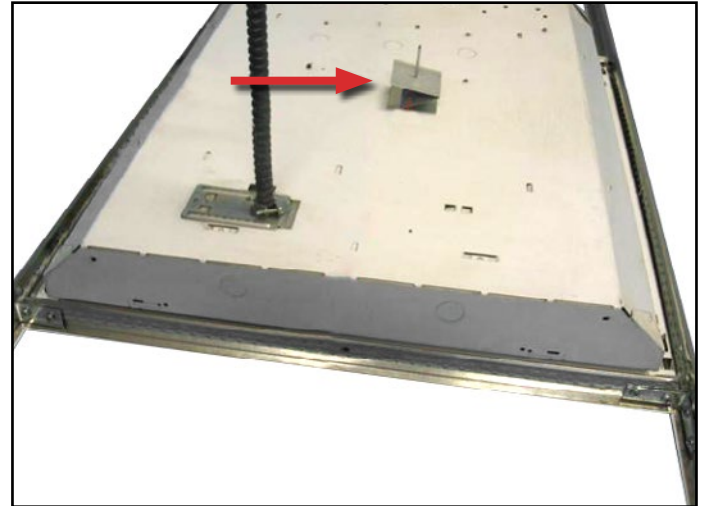

- 2** Remove cover and apply peel and stick pins, with spacer, to top of fixture; center for 2x2 fixture, both ends for 2x4.

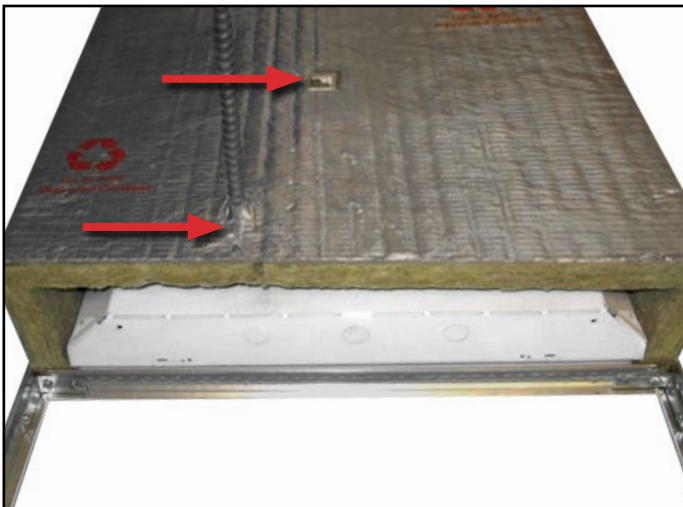

- 3** Place cover over fixture, align slits with power cable and wires before dropping into place. When aligned drop cover into place, Stick pins will extend through the cover. Install square pin washers to secure in place. Tape and seal all slits with reinforced foil tape (FSK).



- 4** Align and secure end caps with provided stick pins. No washers are used here.


**CONTRACTORS REPORT TYPICAL INSTALLATION  
CAN BE PERFORMED IN ABOUT 6 MINUTES.**

**DISCLAIMER:** These application notes represent generally accepted procedures for successful installation. Sound Isolation Company reserves the right to alter these suggestions and encourages contact with the factory or its representatives to review any possible modification to these application notes prior to commencing installation.


## PRIVACY SOUNDPROOFING LIGHT COVERS™(PSLC) - INSTALLATION GUIDE

If you have any questions after reading this entire document, call the factory before starting the installation.


### INSTALLATION GUIDE FOR RECESSED CAN LIGHT FIXTURES

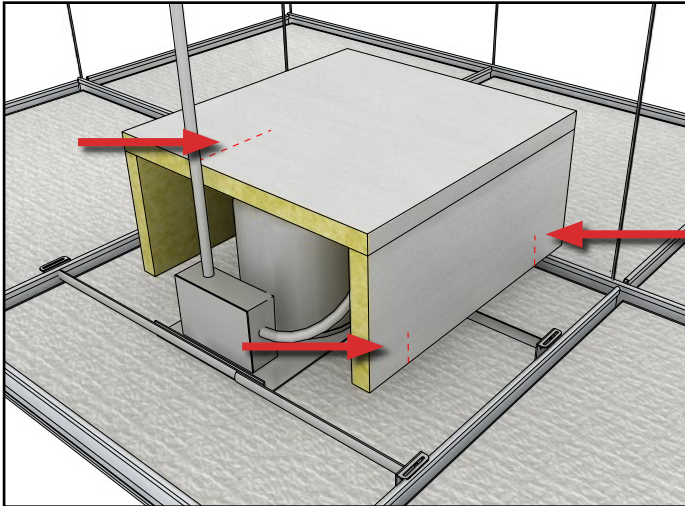

- 1** Place cover over light and align with grid. Mark and slit for power cable and installation framing so cover will rest flat on the ceiling tile or drywall.

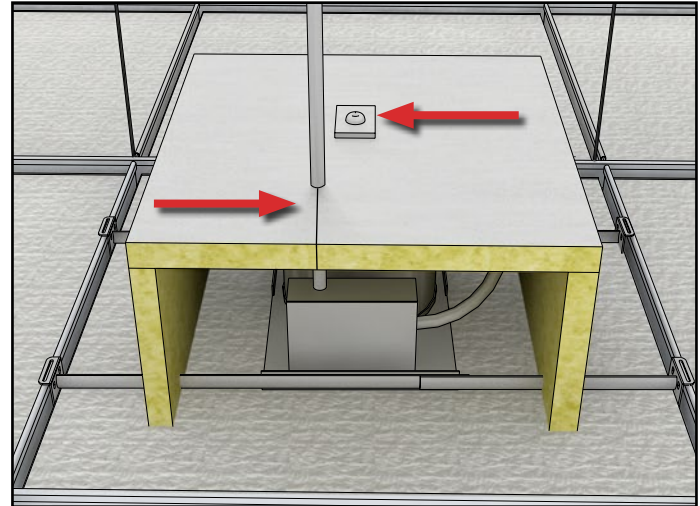

- 2** Align slits with power cable and mounting hardware before dropping into place. When aligned drop cover into place, and configure so it is flat on ceiling tile or drywall

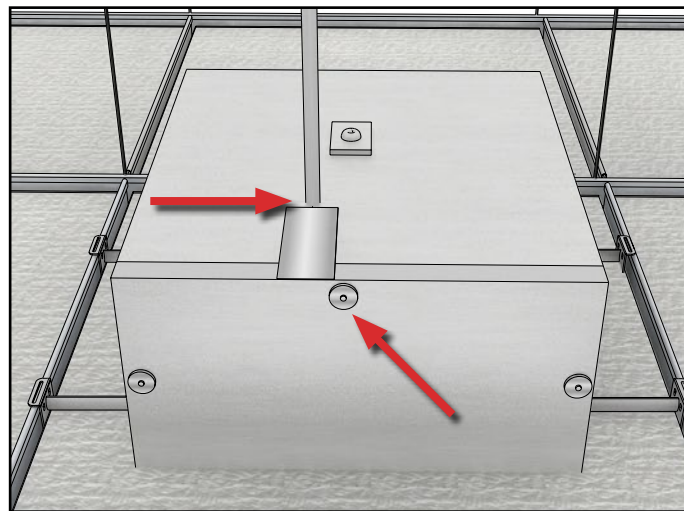

- 3** Align and secure end caps with provided stick pins. Tape and seal all slits with reinforced foil tape (FSK).

**CONTRACTORS REPORT TYPICAL INSTALLATION  
CAN BE PREFORMED IN ABOUT 6 MINUTES.**

**DISCLAIMER:** These application notes represent generally accepted procedures for successful installation. Sound Isolation Company reserves the right to alter these suggestions and encourages contact with the factory or its representatives to review any possible modification to these application notes prior to commencing installation.